


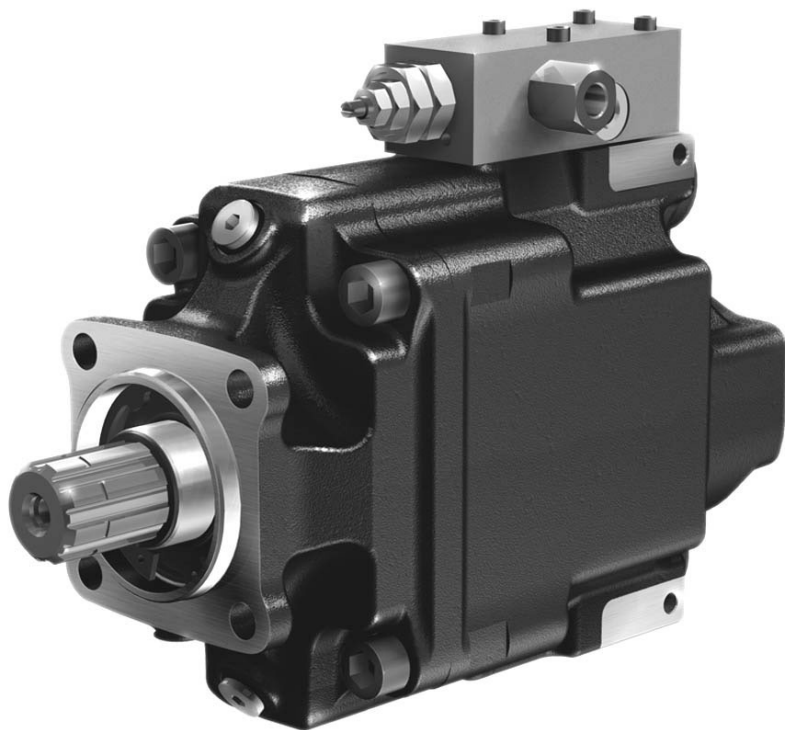

INSTALLATION AND STARTUP MANUAL

HYDRAULIC PUMPS SERIES VP1-095/-110/-130

Effective: April, 2025

Supersedes: March, 2023

Table of Contents

Installation information	3
VP1 Through-Shaft.....	5
VP1 installation on a PTO / Engine PTO	6
Start-up procedure	7
Fluids	8
LS control adjustments	9
Suction fittings.....	10



WARNING – USER RESPONSIBILITY

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

Offer of Sale

Please contact your Parker representation for a detailed "Offer of Sale".

IMPORTANT INSTALLATION INFORMATION

1. Make sure max input torque and max bending moment of the PTO (including the VP1 pump) are not exceeded.
Also, make sure the direction of rotation of the VP1 pump correspond to the PTO, and that pump and PTO specifications are not exceeded in the application.
2. **When VP1-095, -110 and -130 is assembled to an engine PTO make sure that the pump isn't overheated in the off-load mode. For more information, see page 7, BPV-VP1 unloading valve.**
3. Never use excessive force when installing a gear, coupling or sleeve on the VP1 pump shaft.
4. The pump should be installed below the lowest oil level in the reservoir (fig. 10, pg. 8);
if this is not possible, please contact Parker Hannifin for further information.
5. A separate drain line must be installed between the control drain port T and the reservoir (refer to fig. 10, pg. 8); connect the drain line directly to the oil cooler (if the hydraulic system is so equipped).
6. A pressure relief valve is recommended in the outlet (pressure) line from the pump; it should be set 15 – 20 bar higher than max pressure setting of the pump.
Example: The main pressure relief valve located in the directional control valve.

NOTE:

Always run a function, after adjusting the standby pressure or the max pressure setting, before you read the value.

NOTE:

- The suction fitting must be ordered separately (refer to pg. 10)
- VP1-095/-110/-130 installation on a PTO: please refer to page 6 for information.

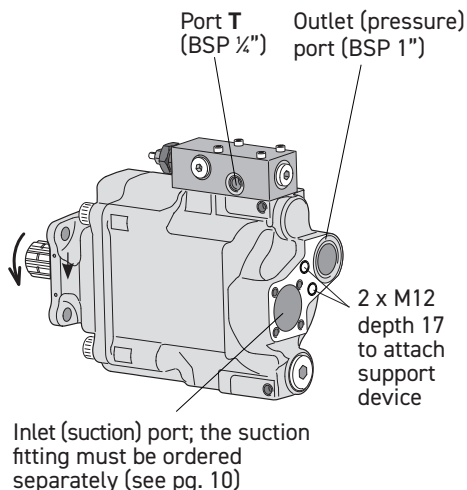


Fig. 1. VP1-095/-110/-130 main ports; right hand rotating pump.

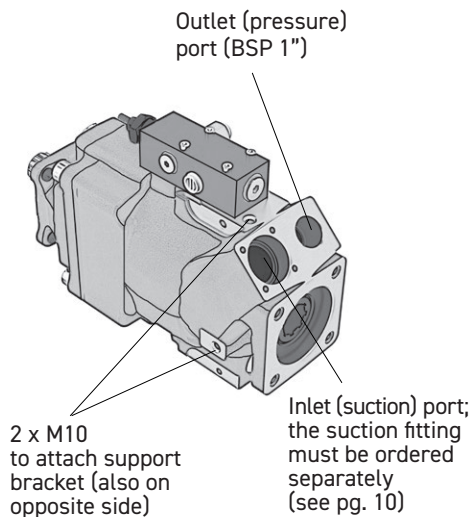


Fig. 3. VP1-095/-110/-130 through shaft main ports; right hand rotating pump.

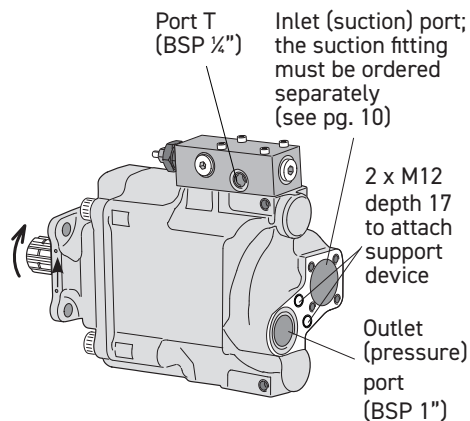


Fig. 2. VP1-095/-110/-130 main ports; left hand rotating pump.

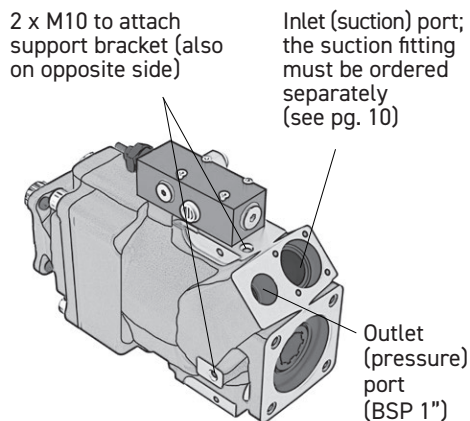


Fig. 4. VP1-095/-110/-130 through shaft main ports; left hand rotating pump.

TANDEM COUPLING

VP1-095/-110/-130

The VP1 pump can be ordered with a through-shaft option, which means that an additional

pump, such as a VP1 or other Truck pumps/ Pumps can be installed in tandem with the VP1.

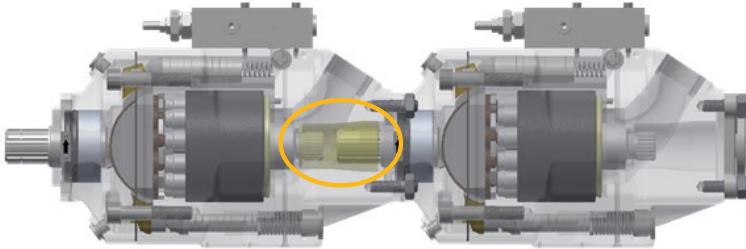


Fig. 5. VP1 Tandem Coupling

NOTE: The bending moment caused by the weight of a tandem assembly normally exceeds that allowed by the PTO.

To prevent damage, the first pump should be supported by a bracket attached to the gearbox;

it must not be fastened to the truck chassis. Likewise, when the tandem assembly is installed on a separate bracket and driven by a cardan shaft, the first pump should have a support attached to the pump bracket (Fig. 6).

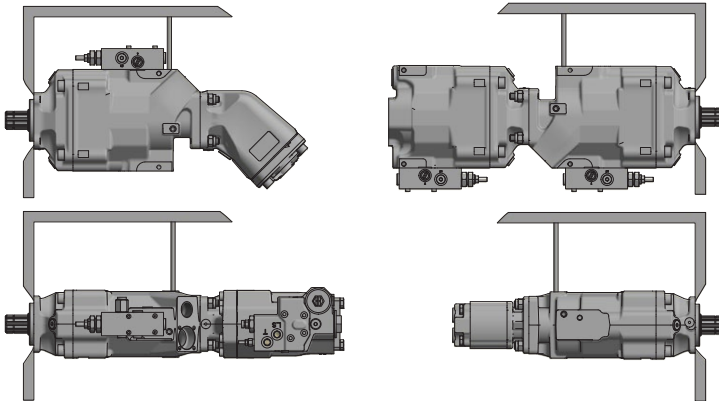


Fig. 6. Support bracket on first pump in tandem assembly

IMPORTANT: Contact Parker Hannifin for additional information when considering tandem mounting a second pump. The maximum torque that can be transmitted through the first pump VP1-095/-110/-130 in tandem is 720 Nm

Installation information tandem coupling.

1. The pumps must be filled with oil and then purged before start-up.
2. When using VP1 pumps in Tandem. Set the standby pressure on the controls with a difference of 5 Bar. (Example 27 bar on Pump1 and 32 bar on pump 2)

VP1 INSTALLATION ON A PTO / ENGINE PTO

The VP1 input shaft must **not** be subject to external radial and/or axial forces (see illustration to the right).

Installation examples:

- a) A gear drive with a bearing supported gear is acceptable (as shown in the illustration below)
- b) A gear mounted directly on the VP1 input shaft is usually **not** acceptable
- c) A belt drive pulley installed directly on the VP1 input shaft is usually **not** allowed

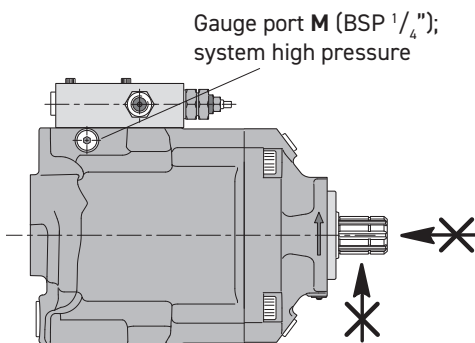


Fig. 7. Usually, no external radial and/or axial forces are allowed on the VP1 shaft

NOTE: If an installation according to b) or c) above, is considered, contact Parker Hannifin.

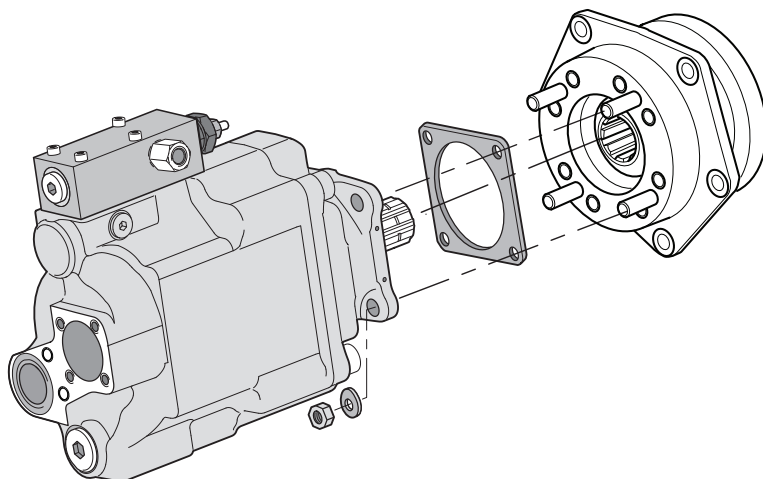


Fig. 8. VP1-095/-110/-130 shown with a bearing supported gear on an engine PTO adapter (example).

VP1 INSTALLATION ON AN ENGINE PTO

BPV-VP1 unloading valve

The BPV-VP1 unloading valve is utilized in hydraulic systems where the pump is in constant operation.

The valve protects the pump from being overheated in the off-load mode by allowing a small flow through the pump. When load sensing valve function is engaged, the bypass flow is cut off (as port 'X' is being pressurized).

The valve will also de-air the suction line and the pump body after a long standstill.

(The pump is assembled above the oil-tank and during the standstill some of the oil in the pump housing has been drained back to the oil-tank)

Valve type	Ordering number
BPV-VP1	379 8799

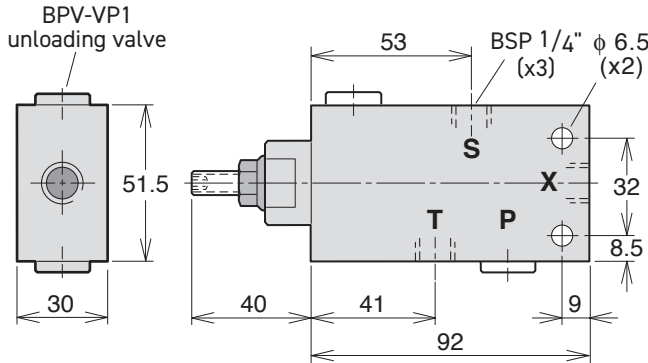


Fig. 9. BPV-VP1 unloading valve.

For more information also see [MSG30-8226-INST/UK](#), Installation Information Unloading Valve BPV for VP1.

START-UP PROCEDURE

- Make sure the entire hydraulic system is as clean as possible before filling it with a recommended fluid.
- The pump must be filled with fluid and then purged before start-up (fig. 10). Please note, that purging should only be performed when the pump is connected to the reservoir and the entire system is filled with hydraulic fluid.
- Air in the VP1 (or in the rest of the hydraulic system) can cause excessive noise and damage pump performance.
- When starting up the system, activate high flow/low pressure in order to purge the hydraulic system properly.
- As previously pointed out, a separate drain line is required between control port T and the reservoir (fig. 10).
- Do **not** install a suction filter in the inlet line.

FLUIDS

Suitable fluids: Mineral based, hydraulic fluids type HLP (DIN 51524), ATF (automatic transmission fluids) and API/CD motor oils.

Fluid temperature

Main circuit: Max 75 °C.

Viscosity

Recommended viscosity: 20 – 30 mm²/s (cSt).

Operating viscosity limits:

- Min 10 mm²/s; max 400 mm²/s
- At start-up: max 1000 mm²/s.

Filtration

- 25 µm (absolute) in clean environment and/or low pressures (< 200 bar)
- 10 µm (absolute) in contaminated environment and/or high pressures (200 bar and above).
- Fluid cleanliness should follow ISO standard 4406, code 20/18/13.

NOTE: Before start-up, open the uppermost purge plug and purge the pump. After purging, make sure the plug is tightened **but not to more than 30 Nm**.

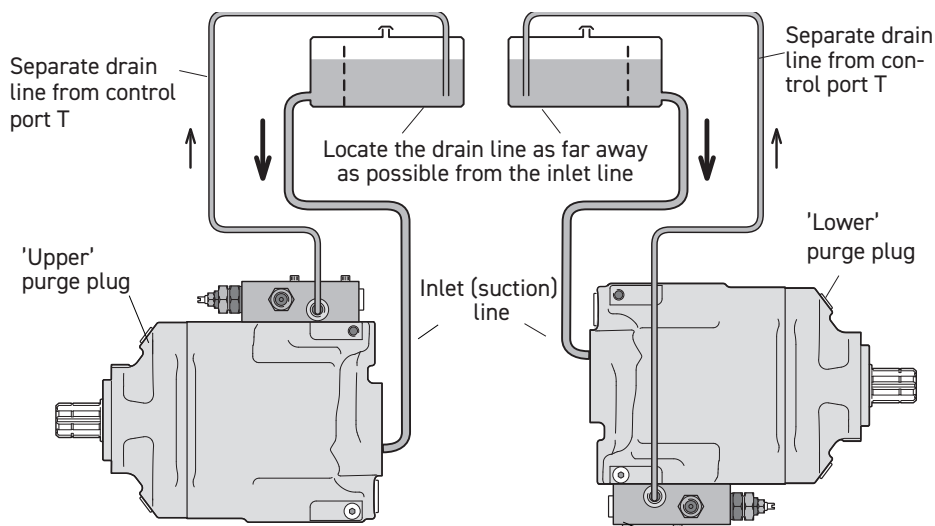


Fig. 10. Purging the VP1-095/-110/-130 (right hand pumps shown)

LS CONTROL ADJUSTMENTS

System pressure limiter

- The system (high) pressure relief valve is factory set at 350 bar.
- Although it can be set higher, the system pressure relief valve must **not**, under any circumstance, be set higher than 400 bar when the hydraulic system is being delivered to the final customer.
- Make sure 'max peak pressure 420 bar', as measured in gauge port M on pump (see fig. 7), is not exceeded.

Standby pressure

- The standby pressure, Δp , is factory set at 25 bar but is adjustable between 15 and 40 bar.
- The 25 bar setting and the standard orifices usually provide an acceptable directional valve characteristic as well as system stability.
- For additional information, please contact Parker Hannifin.

Adjustments (refer to fig. 12)

1. System (high) pressure adjustment screw; factory set at 350 bar (1 turn approx. 140 bar)¹⁾
2. Counter nut for adjustment screw 1
3. Bushing; basic valve setting, factory set; DO NOT TOUCH!

Note: Before you read the measured value, always activate and run a function after you have made the adjustment of settings. Adjust standby pressure first and then the system pressure.

4. Standby pressure adjustment bushing; factory set at 25 bar (1 turn approx. 17 bar)¹⁾
5. Counter nut for bushing 3.

¹⁾ Before attempting to change a setting, the corresponding counter nut must be opened; it should be re-tightened after the adjustment.

NOTE: Dissamble the protection cap from the setting screw before adjusting the setting of the pressure. After the setting of the pressure, assemble the protection cap on the setting screw again. Always run a function, after adjusting the standby pressure or the max pressure setting, before you read the value.

Item	Wrench / Dimension
1	Hex Head Wrench / 4 mm
2	Wrench / 13 mm
3	DO NOT TOUCH
4	Wrench / 27 mm
5	Wrench / 27 mm

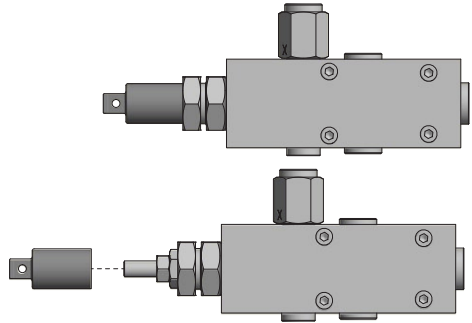


Fig. 11. Dissambling the protection cap

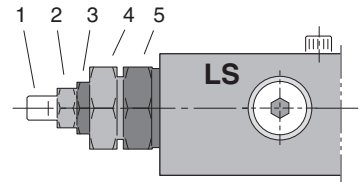


Fig. 12. VP1-095/-110/-130 control adjustments.



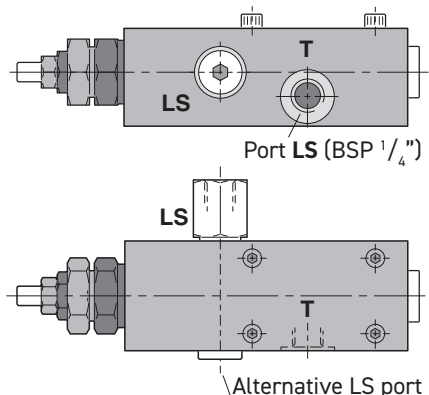


Fig. 13. VP1-095/-110/-130 control ports.

SUCTION FITTINGS

A 'suction fitting' consists

of a straight, 45° or 90° suction fitting, clamps, cap screws and an O-ring.

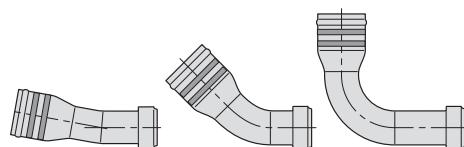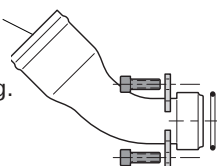

'Straight' fitting

45° fitting

90° fitting

Suction fitting	Diameter	Order no.
'Straight'	2 1/2"	378 0637
45°	2 1/2"	378 0634
90°	2 1/2"	378 1980
'Straight' ²⁾	3"	378 3523
45° ²⁾	3"	378 3367
90° ²⁾	3"	378 8690

²⁾ Utilize the 3" fitting when the reservoir is below the pump or flow is larger than 140 l/min.

NOTE: A fitting is not included with the pump; it must be ordered separately.

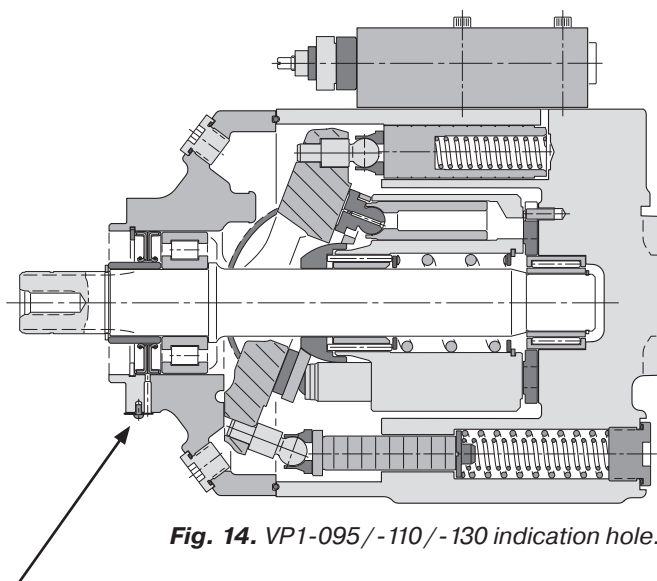


Fig. 14. VP1-095/-110/-130 indication hole.

If any oil should come out of the indication-hole on the pump;

- Stop the system immediately.
- Determine the cause of leakage.
- Replace damaged parts.
- Make sure you have corrected the source of the problem, not only the symptom.

Parker can not be held responsible for damage to PTO, engine and gearbox caused by improper maintenance of the hydraulic system.

Position notification regarding Machinery Directive 2006/42/EC:

Products made by the Hydraulic Pump & Motor Europe (HPME) of Parker Hannifin are excluded from the scope of the machinery directive following the "Cetop" Position Paper on the implementation of the Machinery Directive 2006/42/EC in the Fluid Power Industry.

All HPME products are designed and manufactured considering the basic as well as the proven safety principles according to:

- ISO 13849-1:2015
- SS-EN ISO 4413:2010

so that the machines in which the products are incorporated meet the essential health and safety requirements.

Confirmations for components to be proven component, e. g. for validation of hydraulic systems, can only be provided after an analysis of the specific application, as the fact to be a proven component mainly depends on the specific application.

Christian Jäger

General Manager

Hydraulic Pump & Motor Europe



Parker Hannifin Manufacturing Sweden AB
Hydraulic Pump & Motor Europe
Flygmotorvägen 2
461 82 Trollhättan
Tel. +46 (0)520 40 45 00
www.parker.com/msge

MSG30-8214-INST/UK

04/2025

Your Local Authorized Parker Distributor

© 2025 Parker Hannifin Corporation

